

















# ATTENTION

### Inspection

#### Cold Resistance Test

- a. Applied current shall be less than 10% of rated current, at ambient Temp. of  $(23\pm 2)$  °C.
- b. (4-Wire) Resistance Measurement.

### Usage

- a. Do not touch the fuse body or lead wire when power on, avoiding scald or electric shock.
- b. Air pressure is 80 kPa to 106 kPa. These values represent an altitude of +2000 m to -500 m, respectively.

### Replacement

For safety reasons, the Fuse is the non-resettable product, please ensure that the alternative Fuse is the same type when replace it.

### Storage

Please store the fuse in the environment without high temperature, high humidity or corrosive gas, to avoid reducing the solderability of the lead wire. Please use them up within 1 year after receiving the goods.